IMPORTANT

WIRING CONNECTION & INSTALLATION BEST PRACTICES









UP AND/OR OUT TO A SIDE




SECURING TO TERMINALS





PINOUTS AND DIMENSIONS

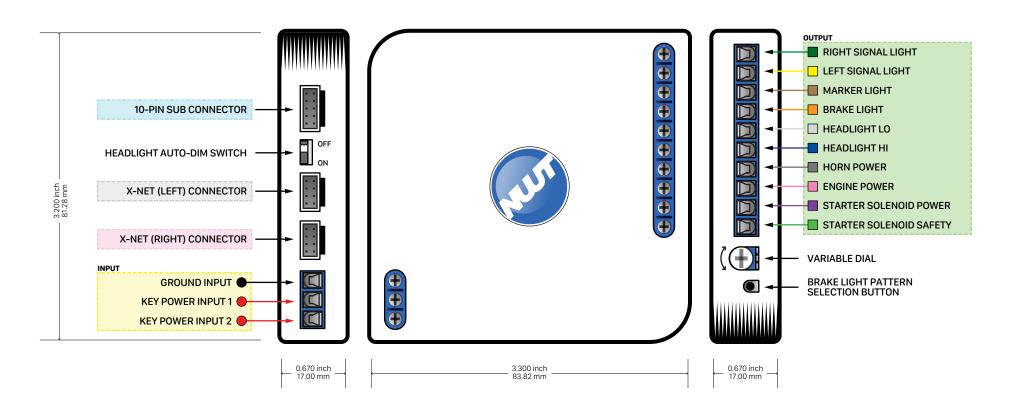

FOR CLARIFICATION AND ASSISTANCE TO YOUR SPECIFIC APPLICATION, OUR ENGINEERING TEAM WOULD BE GLAD TO ANSWER ALL YOUR QUESTIONS. INFO@NUUT.CA



IMPORTANT

WIRING CONNECTION & INSTALLATION BEST PRACTICES

UP AND/OR OUT TO A SIDE














SECURING TO TERMINALS








SPECIAL BUTTON/SWITCH FUNCTIONS

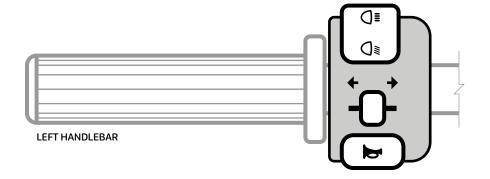



HAZARD LIGHTS Tap HORN BUTTON 3 times

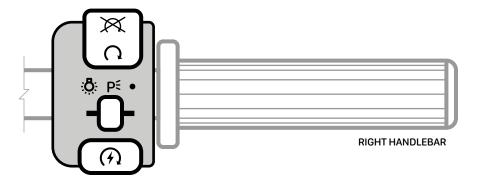

NEUTRAL ON + (7) ENGINE ON + **CLUTCH ON**

ENGINE START Hold down START BUTTON

Engine switch must be in ON POSITION + NEUTRAL or CLUTCH switch ON

BRAKE LIGHT AUTO HOLD

Once to deactivate.

BRAKE LIGHT FLASH PATTERN SELECTION (MODULE SIDE) Press BUTTON on the side of the module to select next pattern

Activate by quickly pulsing the BRAKE LEVER/PEDAL 3 times

1 - standard (default)

2 - 4 flashes

FOR CLARIFICATION AND ASSISTANCE TO YOUR SPECIFIC APPLICATION, OUR ENGINEERING TEAM WOULD BE GLAD TO ANSWER ALL YOUR QUESTIONS. INFO@NUUT.CA

MOUNT WITH LOGO FACING















SECURING TO TERMINALS




TERMINALS SHOULD BE SNUG AND NOT OVER-TIGHTENED



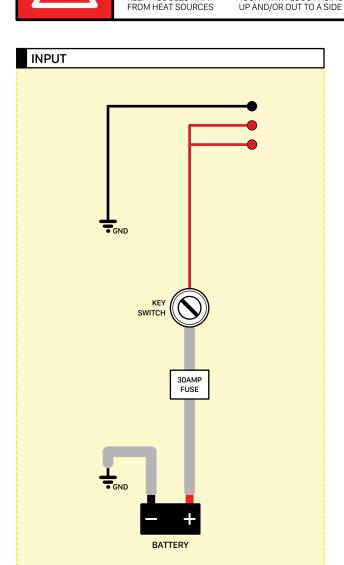

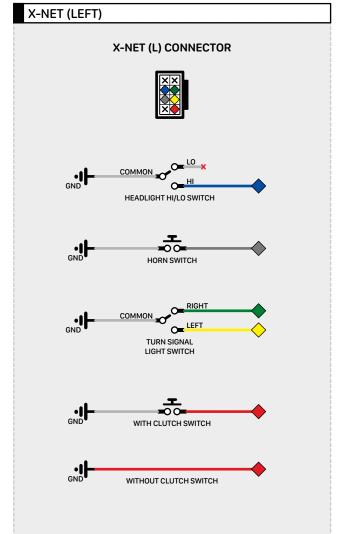

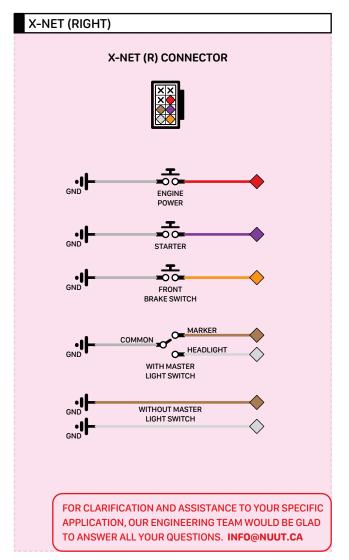

IMPORTANT

WIRING CONNECTION & INSTALLATION BEST PRACTICES

MOUNT WITH LOGO FACING

















