# **IMPORTANT**

### WIRING CONNECTION & INSTALLATION BEST PRACTICES







MOUNT WITH LOGO FACING

UP AND/OR OUT TO A SIDE






SECURING TO TERMINALS



TRICKY

PINOUTS AND DIMENSIONS

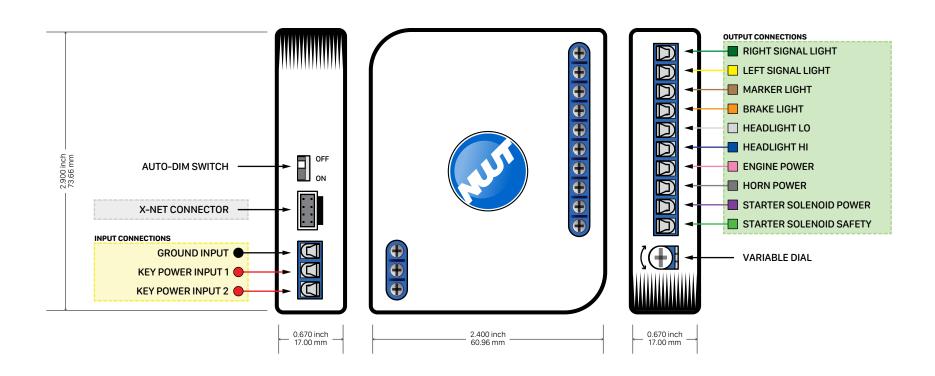

FOR CLARIFICATION AND ASSISTANCE TO YOUR SPECIFIC APPLICATION, OUR ENGINEERING TEAM WOULD BE GLAD TO ANSWER ALL YOUR QUESTIONS. INFO@NUUT.CA



### WIRING CONNECTION & INSTALLATION BEST PRACTICES







MOUNT WITH LOGO FACING

UP AND/OR OUT TO A SIDE





SECURING TO TERMINALS


HOLD =



TERMINALS SHOULD BE SNUG AND NOT OVER-TIGHTENED

**RIGHT** 

## **BUTTON FUNCTIONS**

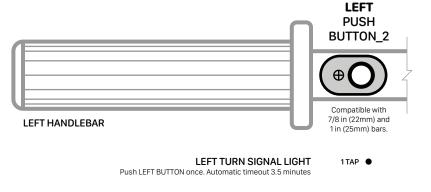

HEADLIGHT HI/LO 2 TAPS ● ●

2 quick push of LEFT BUTTON to toggle between HI and LO

HORN Press and hold LEFT BUTTON for HORN



RIGHT TURN SIGNAL LIGHT 1TAP

Push RIGHT BUTTON once. Automatic timeout 3.5 minutes

**ENGINE POWER ON/OFF** ● ● 2 TAPS

2 quick push of RIGHT BUTTON to toggle between ENGINE POWER ON and OFF

**HAZARD LIGHTS** ● ● ● 3 TAPS

Quickly tap RIGHT BUTTON 3 times to toggle between ON/OFF

**ENGINE START** HOLD

- ENGINE POWER must be ON

- CLUTCH must be ON





For TRICKY packages that come with prewired switches





PAGE 2 OF 3

FOR CLARIFICATION AND ASSISTANCE TO YOUR SPECIFIC APPLICATION, OUR ENGINEERING TEAM WOULD BE GLAD

TO ANSWER ALL YOUR QUESTIONS. INFO@NUUT.CA

UP AND/OR OUT TO A SIDE











SECURING TO TERMINALS







