


X3.S

Specific Installation GL 1100 (Spark Unit)

AUXILIARY
FOR USAGE AND OPTIONS, CONTACT
TECHSERVICE@NWTCYCLETRONIC.COM

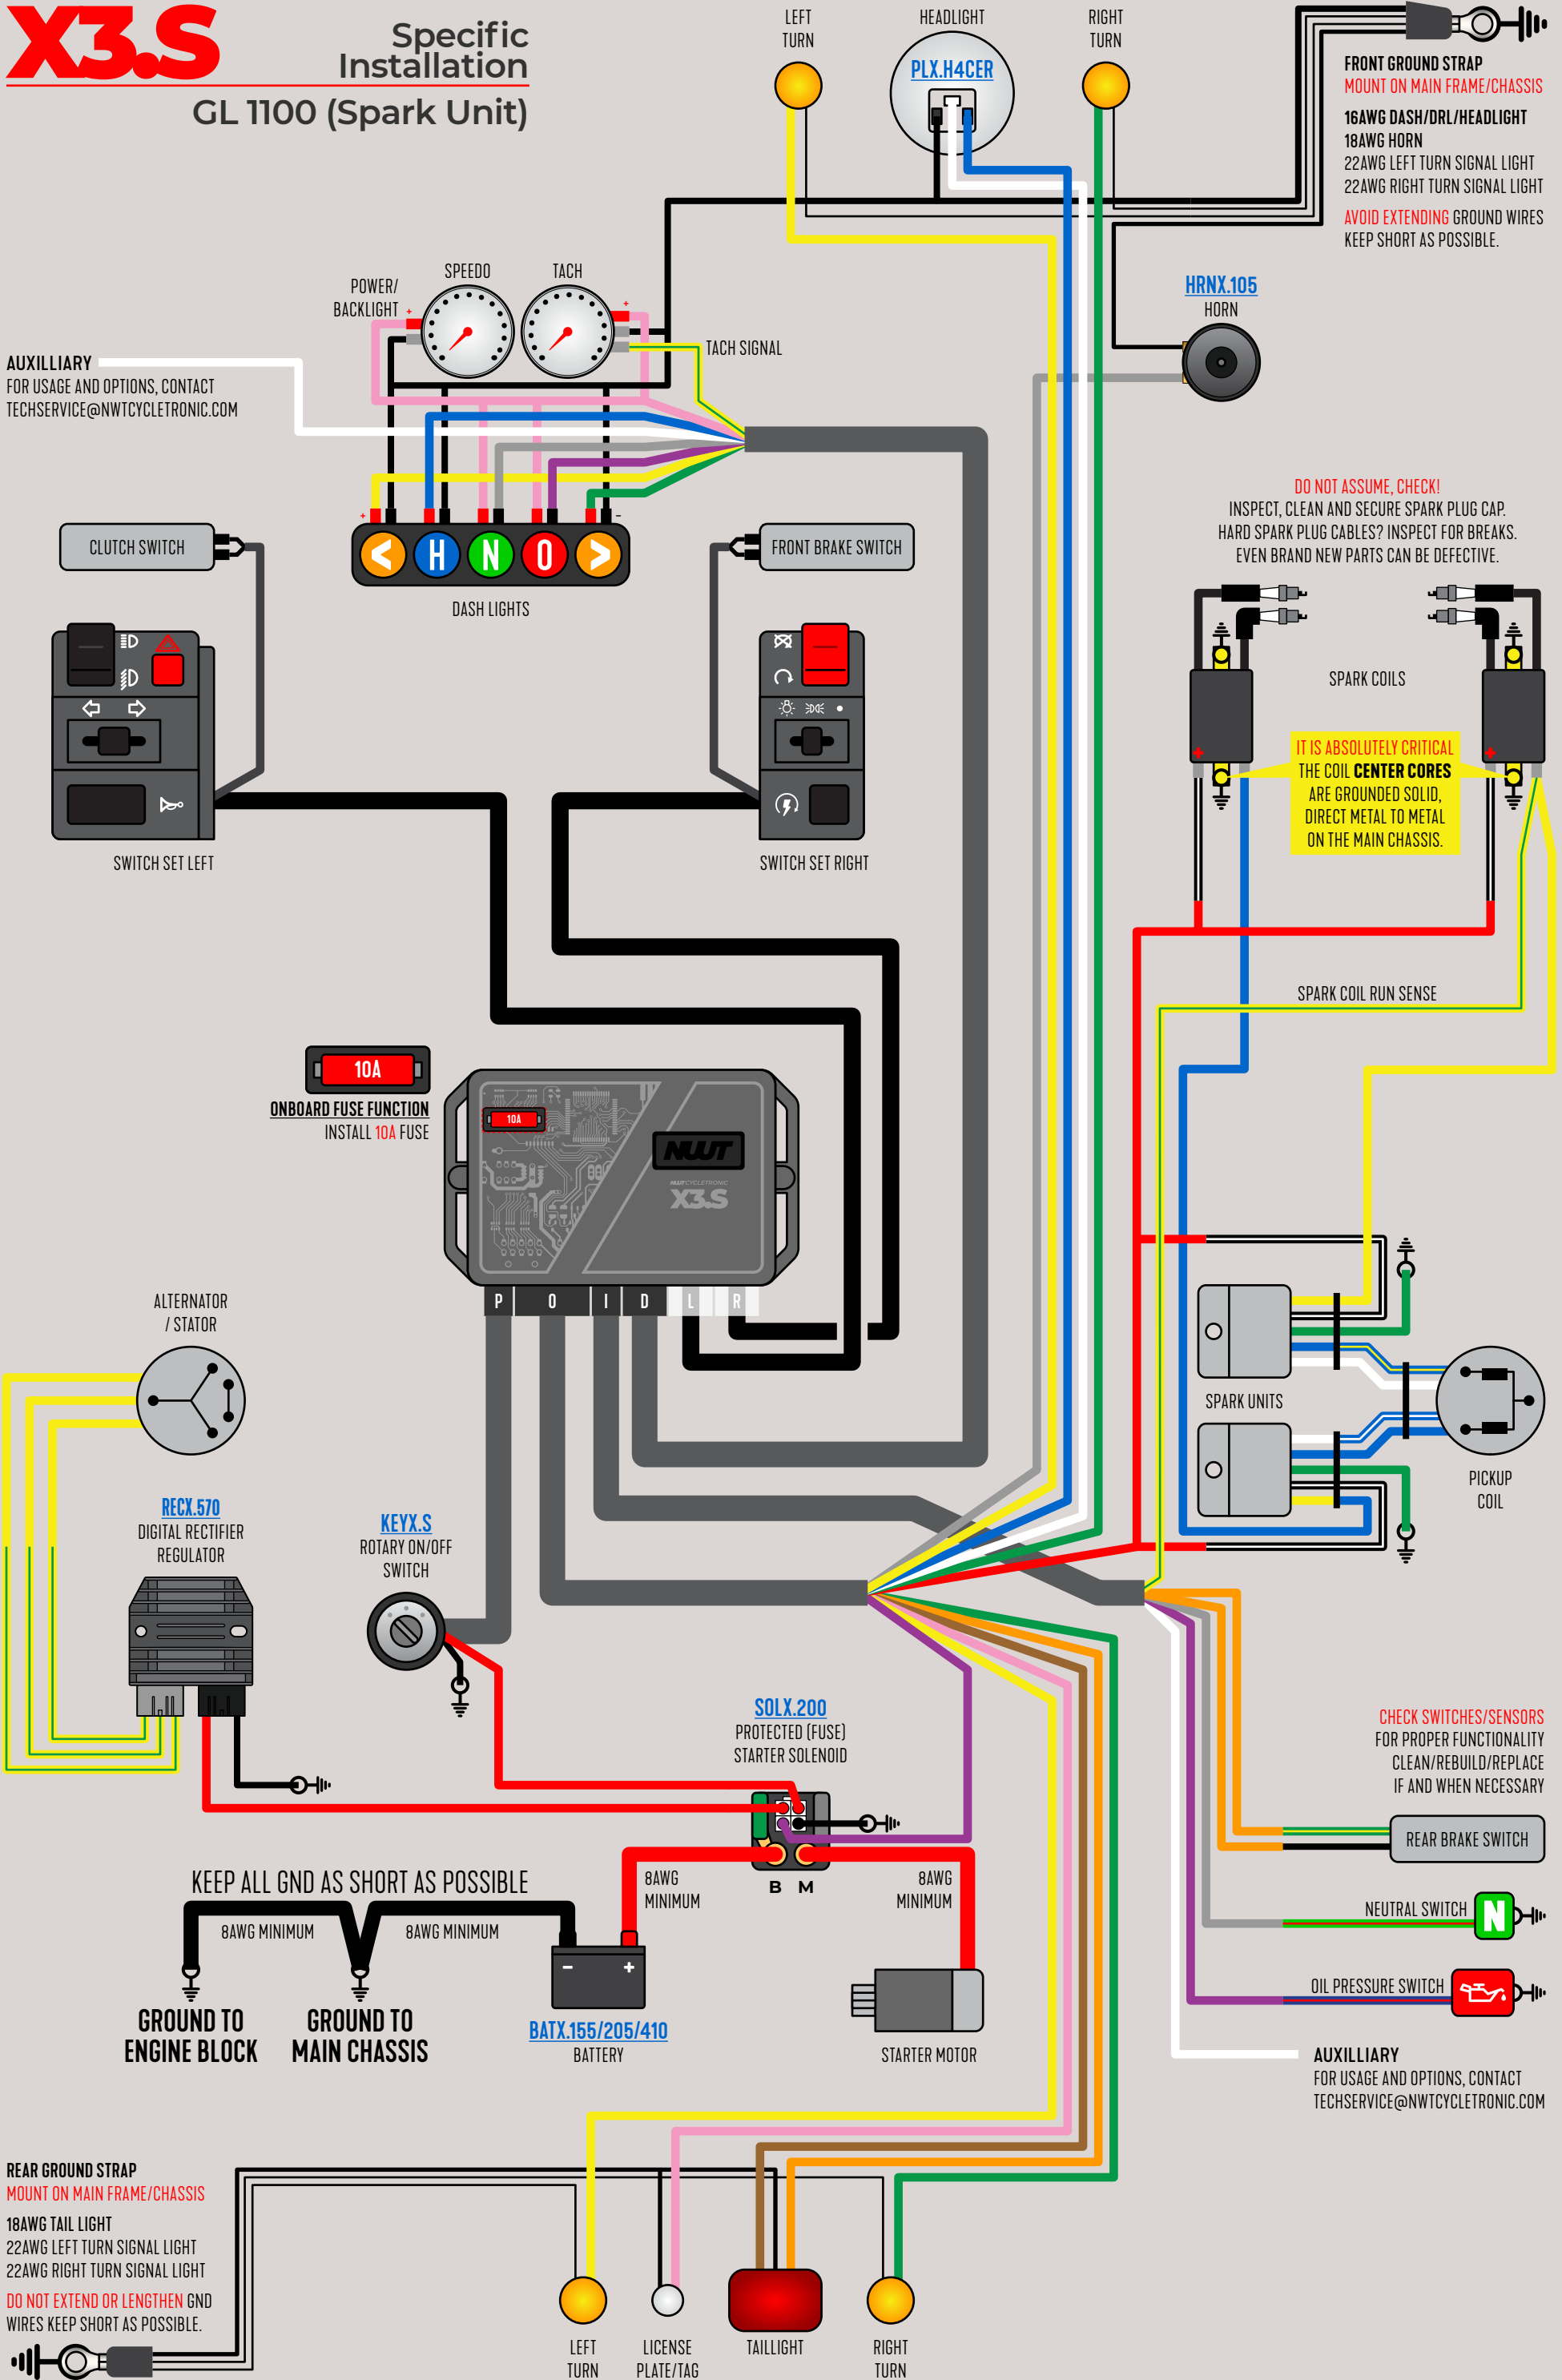

REAR GROUND STRAP
MOUNT ON MAIN FRAME/CHASSIS
18AWG TAIL LIGHT
22AWG LEFT TURN SIGNAL LIGHT
22AWG RIGHT TURN SIGNAL LIGHT
DO NOT EXTEND OR LENGTHEN GND
WIRES KEEP SHORT AS POSSIBLE.

FRONT GROUND STRAP
MOUNT ON MAIN FRAME/CHASSIS
16AWG DASH/DRL/HEADLIGHT
18AWG HORN
22AWG LEFT TURN SIGNAL LIGHT
22AWG RIGHT TURN SIGNAL LIGHT
AVOID EXTENDING GROUND WIRES
KEEP SHORT AS POSSIBLE.

DO NOT ASSUME, CHECK!
INSPECT, CLEAN AND SECURE SPARK PLUG CAP.
HARD SPARK PLUG CABLES? INSPECT FOR BREAKS.
EVEN BRAND NEW PARTS CAN BE DEFECTIVE.

IT IS ABSOLUTELY CRITICAL
THE COIL CENTER CORES
ARE GROUNDED SOLID,
DIRECT METAL TO METAL
ON THE MAIN CHASSIS.

CHECK SWITCHES/SENSORS
FOR PROPER FUNCTIONALITY
CLEAN/REBUILD/REPLACE
IF AND WHEN NECESSARY