


# X3.S

## Specific Installation GS 450

AUXILIARY  
FOR USAGE AND OPTIONS, CONTACT  
TECHSERVICE@NWTCYCLETRONIC.COM

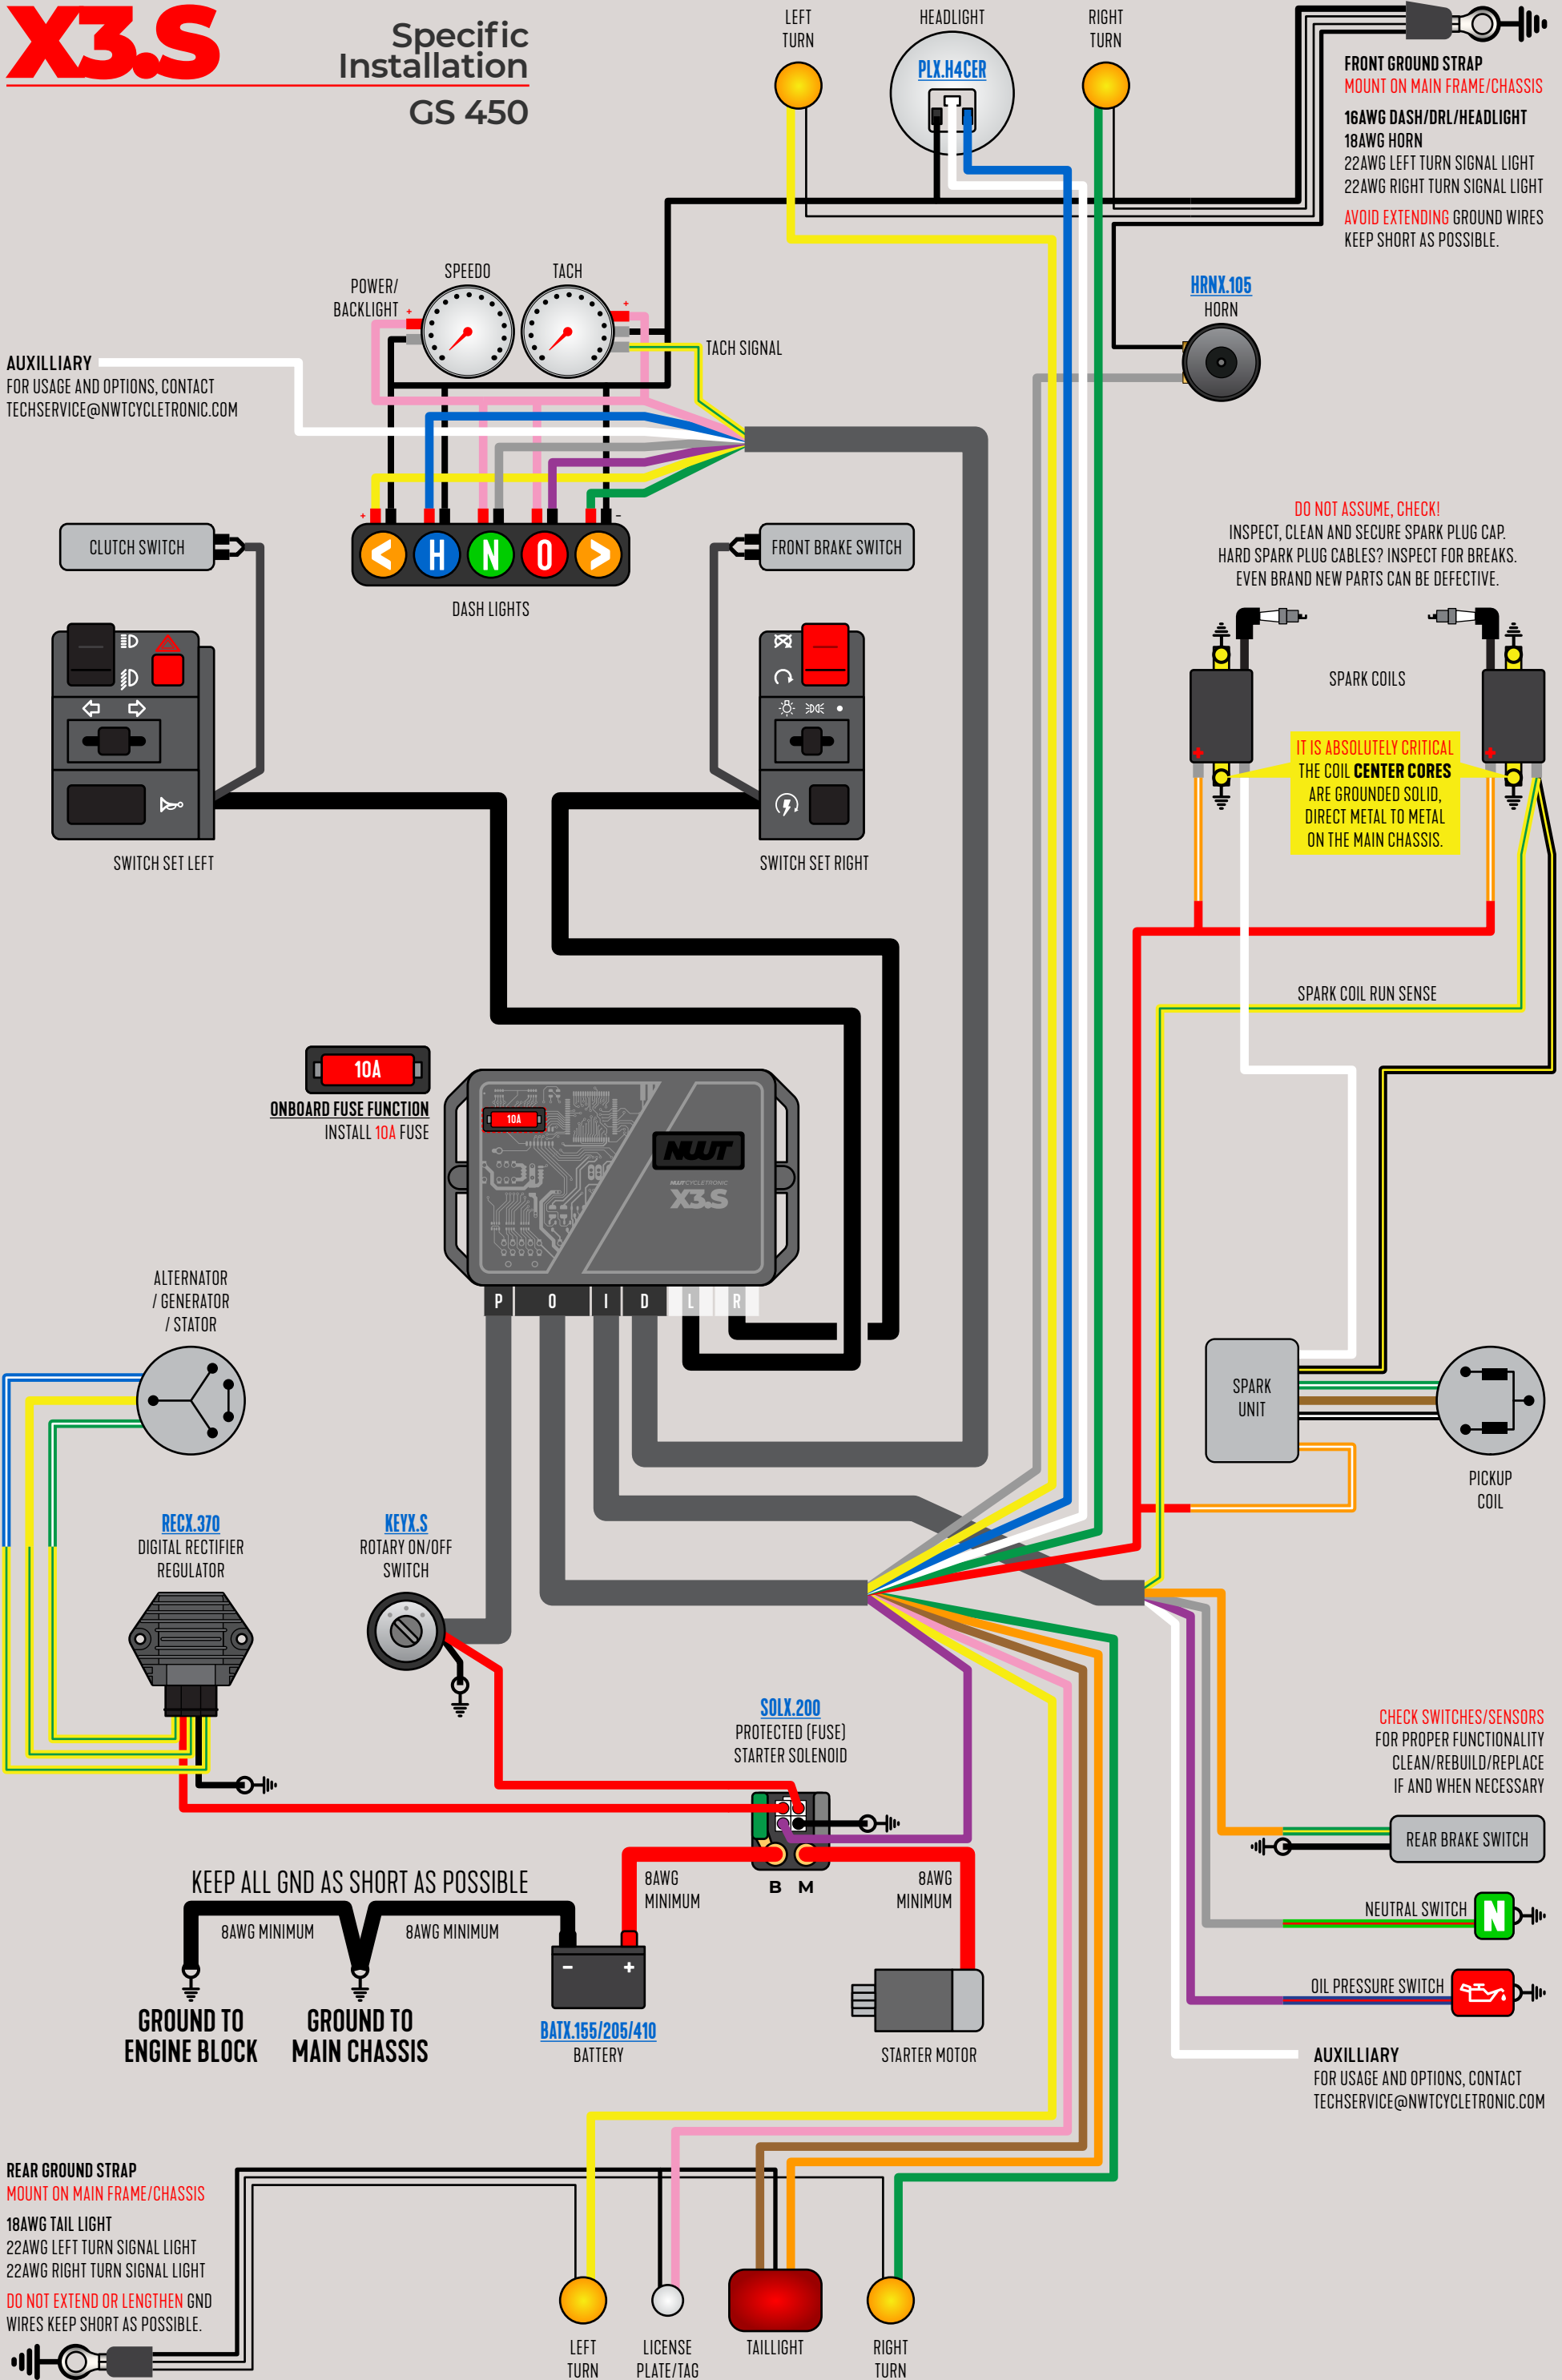

**REAR GROUND STRAP**  
MOUNT ON MAIN FRAME/CHASSIS

18AWG TAIL LIGHT  
22AWG LEFT TURN SIGNAL LIGHT  
22AWG RIGHT TURN SIGNAL LIGHT

DO NOT EXTEND OR LENGTHEN GND WIRES KEEP SHORT AS POSSIBLE.

**FRONT GROUND STRAP**  
MOUNT ON MAIN FRAME/CHASSIS

16AWG DASH/DRL/HEADLIGHT  
18AWG HORN  
22AWG LEFT TURN SIGNAL LIGHT  
22AWG RIGHT TURN SIGNAL LIGHT

AVOID EXTENDING GROUND WIRES KEEP SHORT AS POSSIBLE.

DO NOT ASSUME, CHECK!  
INSPECT, CLEAN AND SECURE SPARK PLUG CAP.  
HARD SPARK PLUG CABLES? INSPECT FOR BREAKS.  
EVEN BRAND NEW PARTS CAN BE DEFECTIVE.

IT IS ABSOLUTELY CRITICAL  
THE COIL CENTER CORES  
ARE GROUNDED SOLID,  
DIRECT METAL TO METAL  
ON THE MAIN CHASSIS.

CHECK SWITCHES/SENSORS  
FOR PROPER FUNCTIONALITY  
CLEAN/REBUILD/REPLACE  
IF AND WHEN NECESSARY