


# TC3.S

## Specific Installation

### XS 400 (Points + Field Coil Stator)

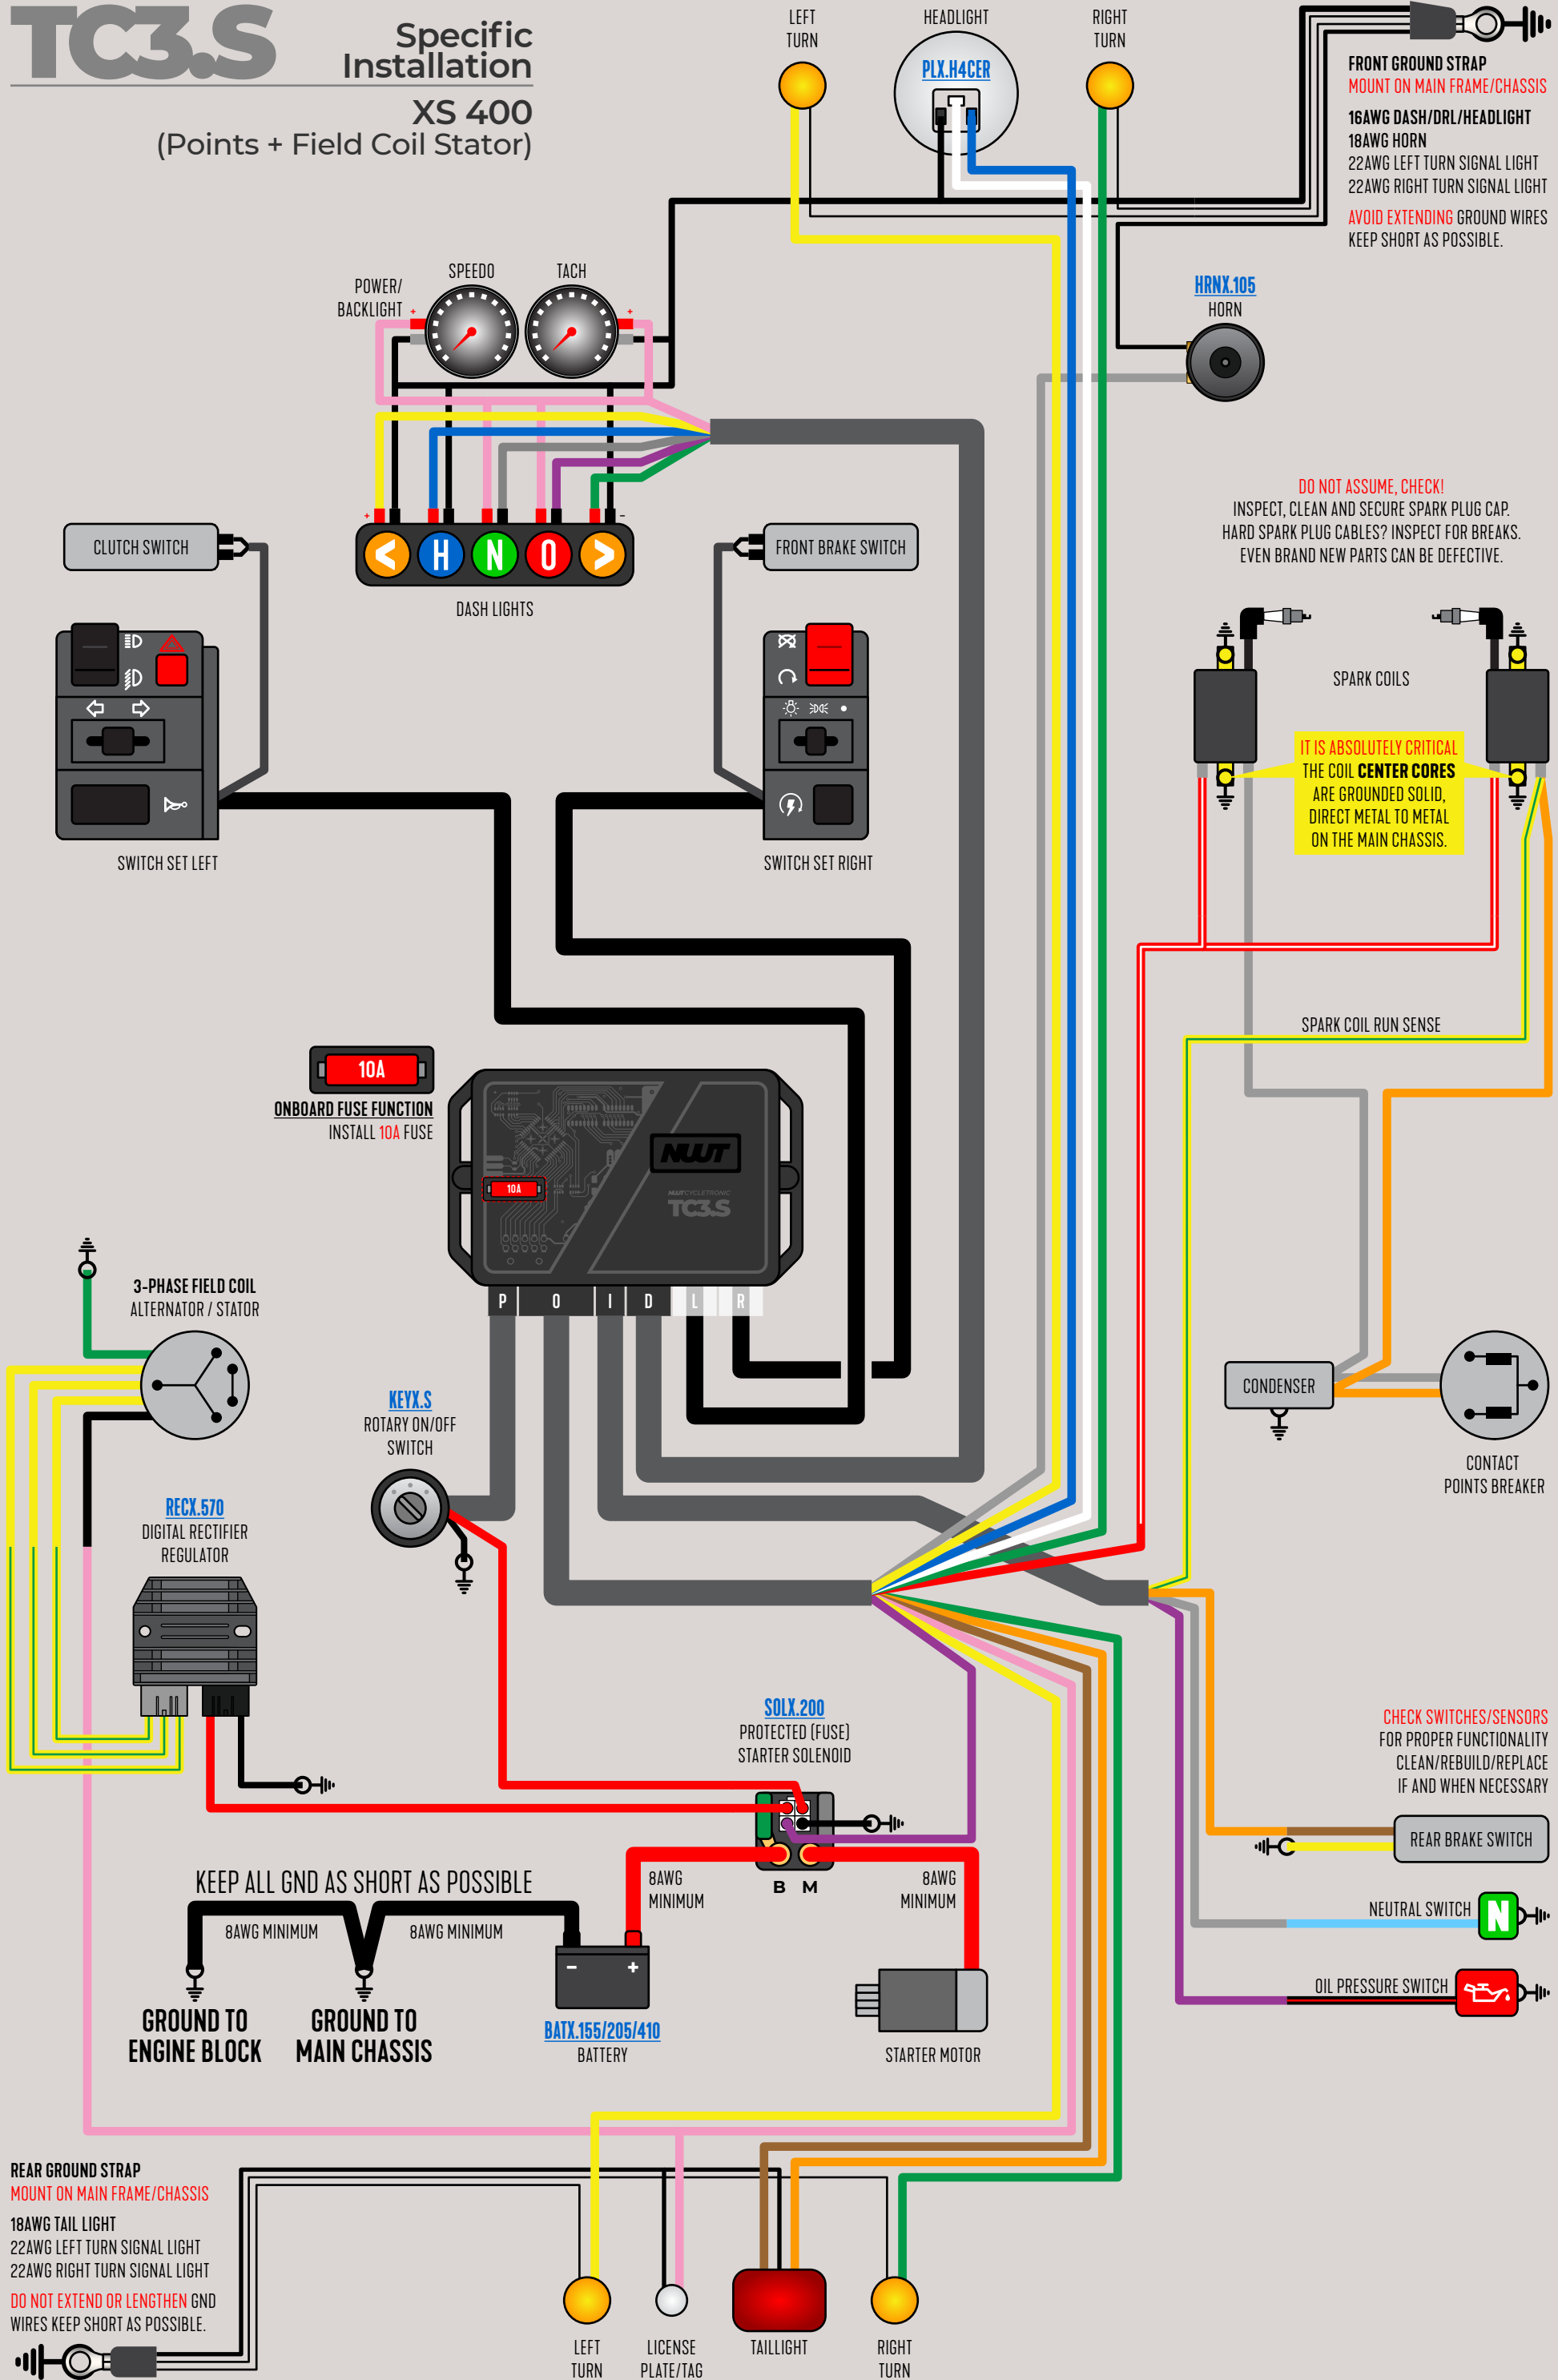

**FRONT GROUND STRAP**  
MOUNT ON MAIN FRAME/CHASSIS

16AWG DASH/DRL/HEADLIGHT  
18AWG HORN  
22AWG LEFT TURN SIGNAL LIGHT  
22AWG RIGHT TURN SIGNAL LIGHT

AVOID EXTENDING GROUND WIRES  
KEEP SHORT AS POSSIBLE.

**DO NOT ASSUME, CHECK!**  
INSPECT, CLEAN AND SECURE SPARK PLUG CAP.  
HARD SPARK PLUG CABLES? INSPECT FOR BREAKS.  
EVEN BRAND NEW PARTS CAN BE DEFECTIVE.

**IT IS ABSOLUTELY CRITICAL**  
THE COIL **CENTER CORES**  
ARE GROUNDED SOLID,  
DIRECT METAL TO METAL  
ON THE MAIN CHASSIS.

**CHECK SWITCHES/SENSORS**  
FOR PROPER FUNCTIONALITY  
CLEAN/REBUILD/REPLACE  
IF AND WHEN NECESSARY

**KEEP ALL GND AS SHORT AS POSSIBLE**

8AWG MINIMUM

GROUND TO ENGINE BLOCK

GROUND TO MAIN CHASSIS

BATX.155/205/410 BATTERY

**REAR GROUND STRAP**  
MOUNT ON MAIN FRAME/CHASSIS

18AWG TAIL LIGHT  
22AWG LEFT TURN SIGNAL LIGHT  
22AWG RIGHT TURN SIGNAL LIGHT

DO NOT EXTEND OR LENGTHEN GND  
WIRES KEEP SHORT AS POSSIBLE.